


Foundations Changing Station Assembly Instructions

1. Arrange steps cabinet and storage cabinet in the configuration required (see below renders/photos of different configuration examples)



2. Align the two cabinets in the desired configuration.
 - a. If the floor is uneven, you may need to use a shim to get the top of the cabinets aligned.
 - b. Once the two cabinets are level across the top, fix the two cabinets together.
 - c. To do this, predrill from the inside of the storage cabinet, through into the stairs cabinet.
 - d. Use an impact driver with square drive, to fasten the two cabinets together, using the 32mm screws supplied.
 - e. We recommend 4 screws to fasten these cabinets together, one in each corner, as shown in the below image:

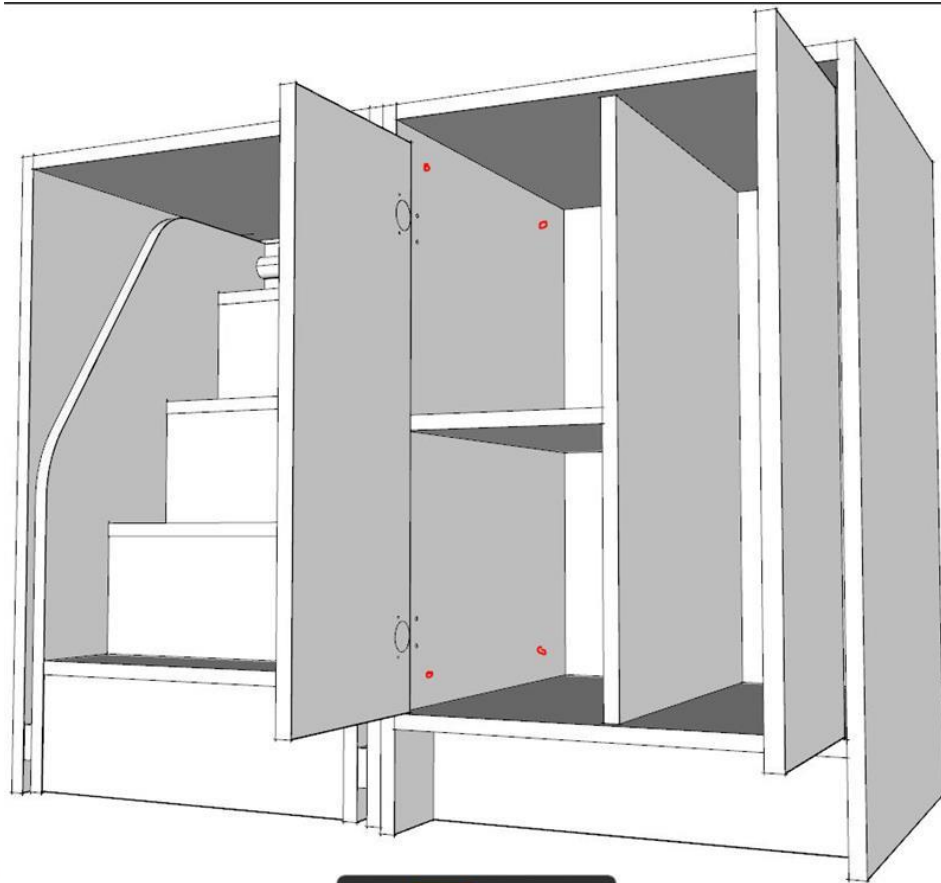

3. Place the mattress box onto the top of the cabinets, and align the edges so it is sitting square.
 - a. Remove the mattress.
 - b. Predrill holes, and fasten the mattress box to the base cabinets.
 - c. We recommend using 6-8 of the supplied screws.
 - d. Clean up dust and place mattress back into the mattress box.

4. Changing station is ready for use.

